




34-5005-01

DETACHABLE BACKREST BRACKET KIT

**HARLEY-DAVIDSON FXST (NO DUECE) 2000-05
FLST 2000-06**

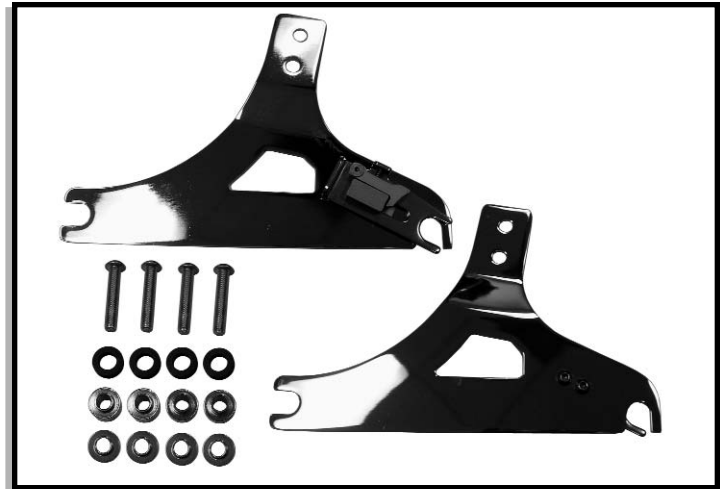

PARTS INCLUDED

- 1 - Right Side Bracket Assembly
- 1 - Left Side Bracket Assembly
- 4 - 3/8-16x2" Button Head Bolt
- 2 - Inner Mounting Bushing - Thin
- 2 - Inner Mounting Bushing - Thick
- 4 - Outer Mounting Bushing
- 2 - Black Plastic Mount - Thin
- 2 - Black Plastic Mount - Thick

TOOLS REQUIRED

- Ratchet
- 7/16" Socket
- 1/2" Socket
- 7/32" Allen Socket

INSTALLATION INSTRUCTIONS

- 1) Remove the two rearmost mounting bolts from the left side rear fender strut.
- 2) Install the supplied mounting hardware to the left fender strut holes. Fully tighten the bolts. See Figure #1
- 3) Repeat steps #1-2 for the right side fender strut.
- 4) Install your backrest per the instructions included in the backrest.

OPERATION

- 1) Slide the front "forks" on the brackets into the thin plastic mounts on the motorcycle.
- 2) Lift up on the slider bracket lever and slide the bracket in order to expose the rear mounting slot. See Figure #2
- 3) Lower the brackets down onto the rear thick plastic mounts and push the slider brackets over the mount until the lever locks into place.

34-5005-01

DETACHABLE BACKREST BRACKET KIT

HARLEY-DAVIDSON FXST (NO DUECE) 2000-05
FLST 2000-06

